

GHOSTOP

THE DOOR STOPS HERE

INSTALLATION INSTRUCTIONS

Includes: highly-durable plate with retracting pin, 2-piece strike plate with patented graduated recess, magnet, 4 decorative screws, and installation sheet.



Strike Plate: 1-1/2" Round x 1/4"

Pin Plate: 1-1/2" x 1" x 1/4"

Pin Assembly: 2-7/16"

**PATENT
PENDING**


- Install Pin assembly along bottom of door at desired location.
- Pin assembly bore must be thoroughly cleaned to ensure proper operation.
- Install Strike plate in floor, centered with Pin assembly. Adjust ramp angle for proper pin contact.



**STRONG MAGNET
WARNING!**


- Can be harmful to pacemaker wearers and others with medical implants, stay clear.
- To avoid damage, keep magnetic media away, such as credit cards.

DOORSTOP SOLUTION KIT

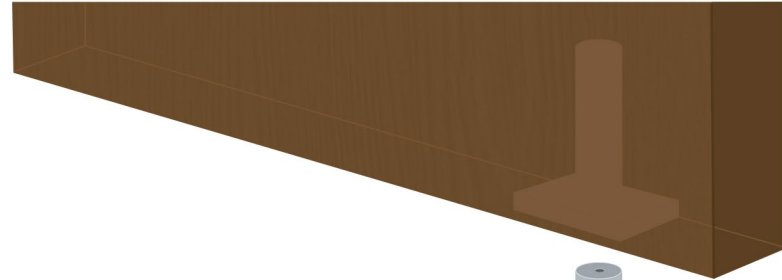

The Zero
Clearance
Solution

Pin assembly
install in bottom
of door

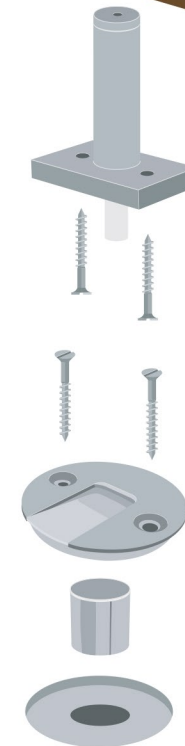

info@ghostop.com • 631.457.0111 • ghostop.com

